
Davies Remanufactured HAWORTH UNIGROUP

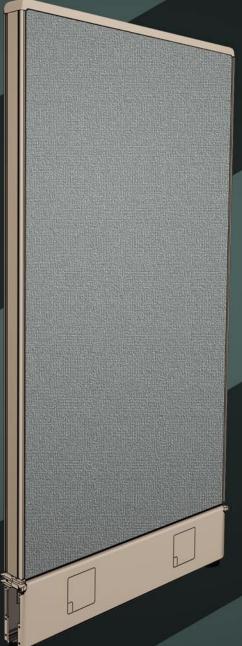

DISASSEMBLY INSTRUCTIONS



DISASSEMBLY INSTRUCTIONS

STANDARD TOOLS REQUIRED



Standard Flat-Head Screwdriver



Standard #2 Phillips Head Screwdriver




Hammer or Mallet



Needle Nose Pliers



DISASSEMBLY INSTRUCTIONS

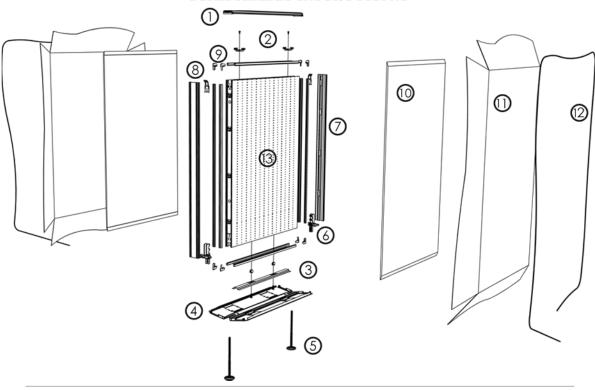

- (1) Top-Cap (steel) 🚳
- 2 (4) Top-Cap Brackets (steel) 👶
- (1) Base Bracket (steel) 3
- (1) Kick-Plate (plastic)
- (2) Leveling Glides (steel/plastic)
- (a) Panel Legs (steel) 👶
- (2) Side Rail (aluminum) 👶

- (2) Side Rail Clip (steel) 👶
- (2) Acoustical Batting (fiberglass)
- (1) (2) Panel Fabric (polyester)
- (2) Fabric Retention Cord (paper)
- (3) (2) Panel Core (steel/paper)
- (4) (2) Misc. Hardware





Items that should be recycled if they cannot be re-used or remanufactured. For more information on where to recycle materials or other recovery options, please review the Davies End of Life Recycling infastructure Matrix and Davies End of Life Recovery Options Matrix.

Available online at: http://daviesoffice.com/environment/




DISASSEMBLY INSTRUCTIONS



STEP 1

Remove top cap by pulling top cap straight up with both hands.

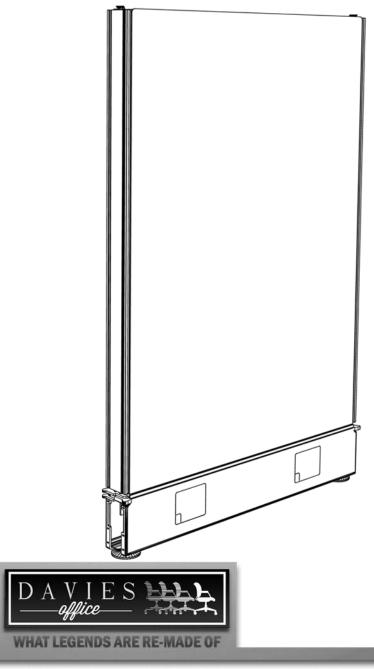


DISASSEMBLY INSTRUCTIONS



STEP 2

Use a philips-head screwdriver to remove the (2) top-cap brackets.

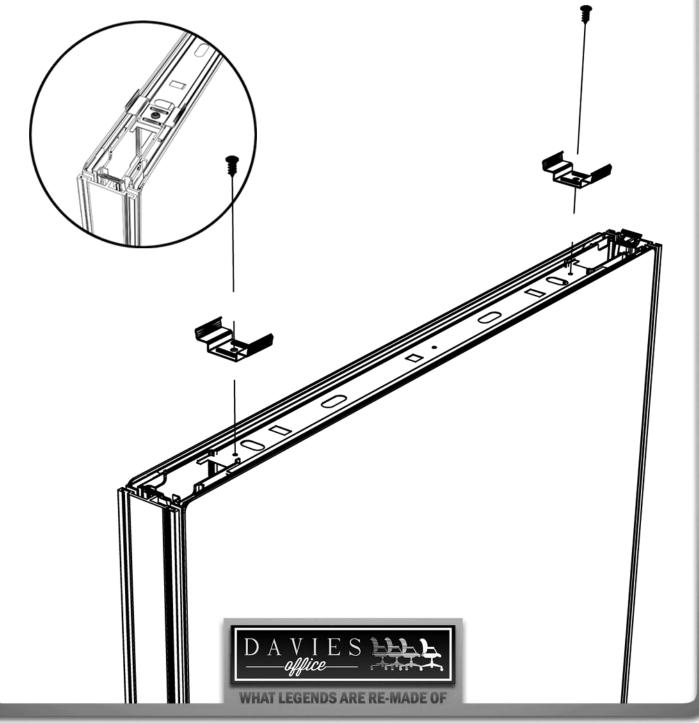

DISASSEMBLY INSTRUCTIONS

STEP 3


You may need assistance!


There is a spring clip that locks the side rails onto the panel frame. Use a flat-head screwdriver to push the spring clip back.

Use a mallet to tap the side rails upward, from the bottom. Keep tapping upward until it is free from the panel frame.

Repeat this step for both sides of the panel.

* NOTE: Use caution when doing this, as the side rail will just fall free once it's dislodged from it's bracket.

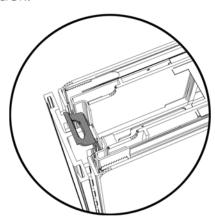

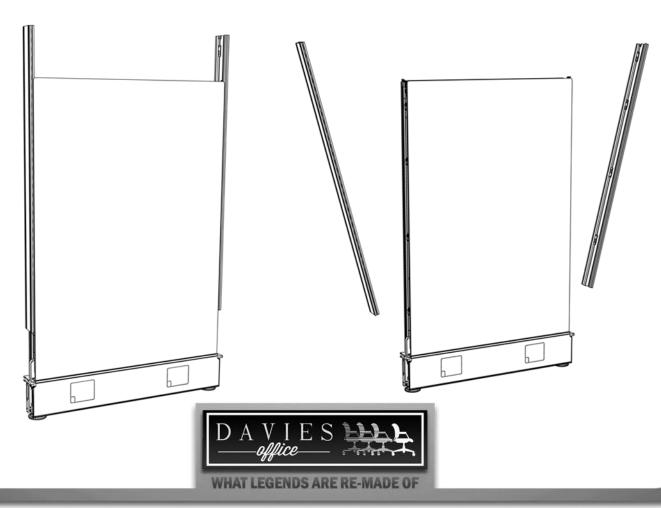


DISASSEMBLY INSTRUCTIONS



STEP 4

Use the flathead screwdriver to help pry the bottom of the spring clip outward. Now slide it downward until it's realeased from the frame.

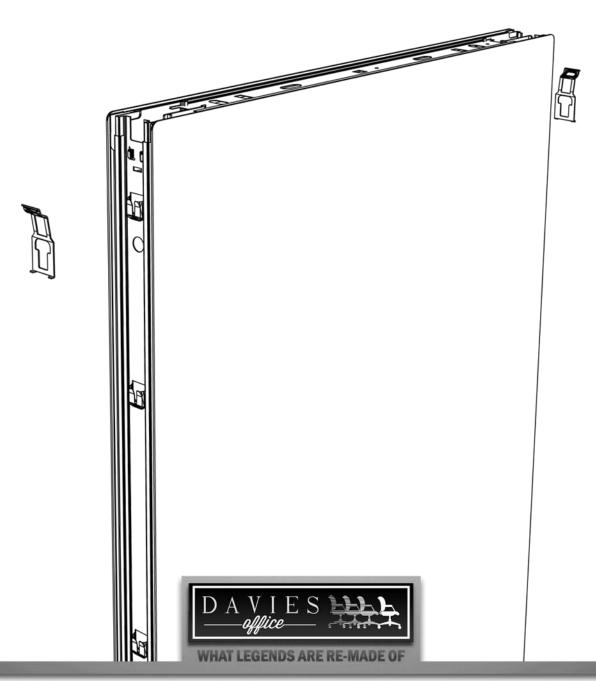


DISASSEMBLY INSTRUCTIONS


STEP 5

The kickplate is one piece of molded plastic that wraps around the base of the panel.

Pull the top of the kickplate toward you until it's free from the bottom of the panel. Do this to both sides.

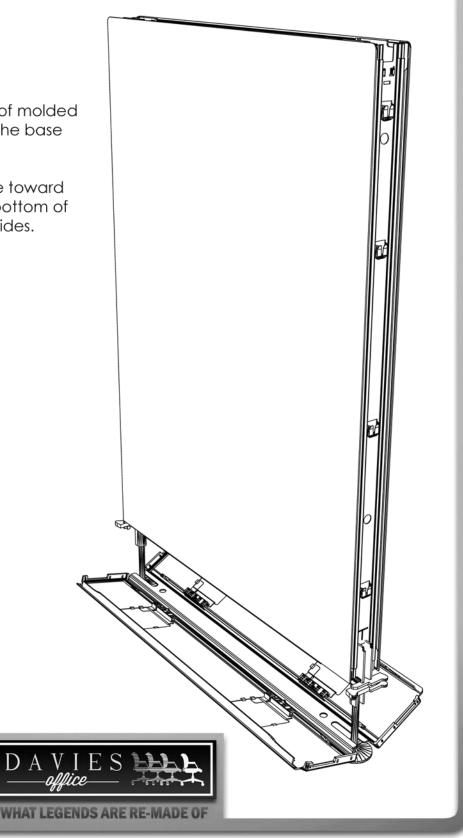

DISASSEMBLY INSTRUCTIONS

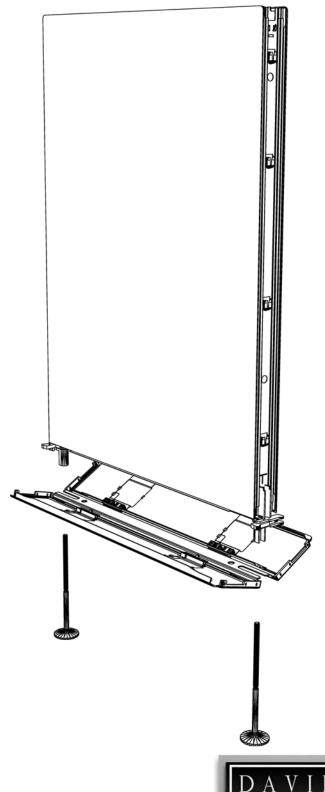

STEP 6

The kickplate can be removed by sliding it to one side and pulling it out, but it may be easier to remove the glides first.


The leveling glides can be removed by simply unscrewing them until they are completely free of the legs.




DISASSEMBLY INSTRUCTIONS

STEP 7

The legs can now be removed, as well. Push them inward until they are free of the panel frame.

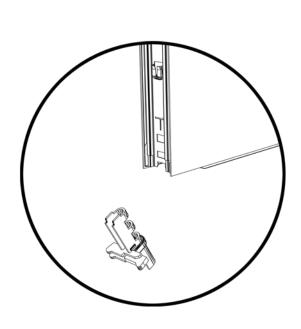

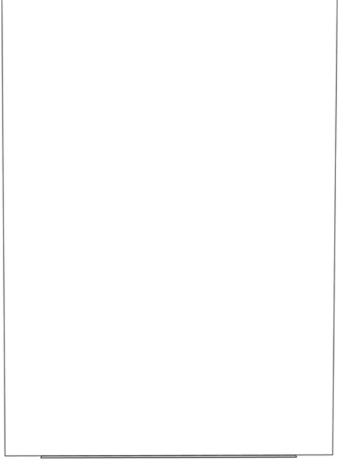








DISASSEMBLY INSTRUCTIONS

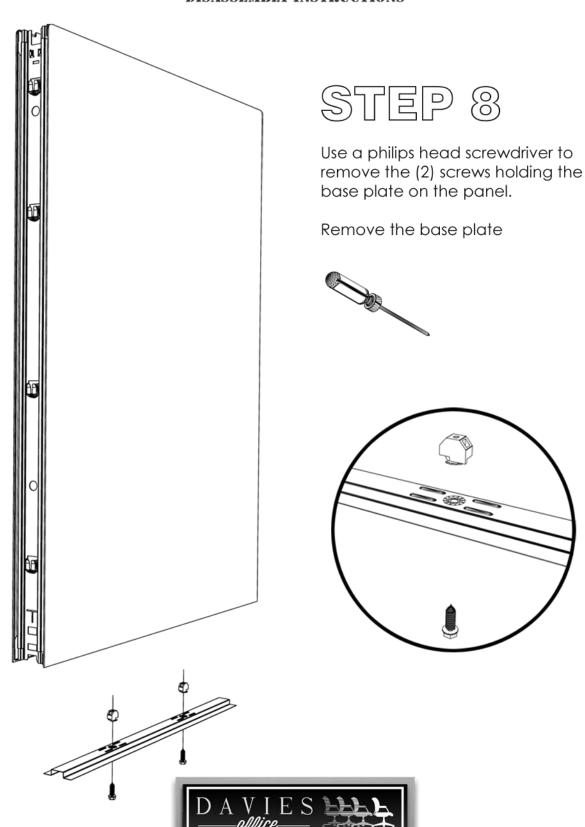

WHAT LEGENDS ARE RE-MADE

DISASSEMBLY INSTRUCTIONS

STEP 9

Lay the panel down flat. Now, remove the paper retention cord that secures the fabric to the panel frame. It might help to use a pair of needle nose pliers. Once the cord has been removed peel the fabric, and aucoustical batting off of the panel frame.

Repeat this process for both sides of the panel.




WHAT LEGENDS ARE RE-MADE

DISASSEMBLY INSTRUCTIONS

STEP 10

Now that the fabric and batting has been removed you'll be able to pull the retention cord channels and the corner brackets off of each edge of the panel frame.

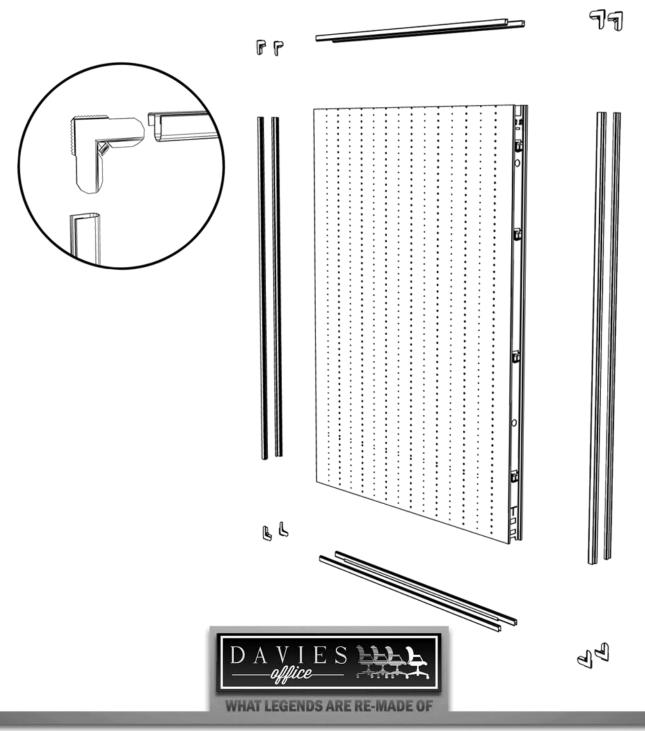

DISASSEMBLY INSTRUCTIONS

COMPLETED

What's left is a panel core. This is as far as a Haworth Places panel can be disassembled using simple hand tools.

